

Thank you for purchasing the iStorage diskAshur DT². Your diskAshur DT² is preformatted in NTFS and shipped with a default Admin PIN of 11223344 and although it can be used straight out of the box with the default Admin PIN, **for security reasons, we highly that a new Admin PIN be created immediately** by following the instructions under the heading 'Changing the Admin PIN'.



First Time Use

To setup the diskAshur DT², insert the supplied USB cable to the back of the drive and connect to your computer. Next, connect the supplied AC adapter to the back of the drive and a mains power outlet. Once connected press the power switch on the back of the drive to the **ON** position, your diskAshur DT² undergoes a rapid self-test to verify all security components are working properly each time the diskAshur DT² is powered on. The LEDs will go through 3 test stages, blinking in sequence **RED**, **GREEN** and **BLUE**, followed by two **GREEN** blinks and then to **RED** (Standby State) on a successful test. Any test failure will force the diskAshur DT² to securely reset itself and automatically resume the self-test without affecting the security characteristics or any data stored on the drive.

With your diskAshur DT² powered on and connected, follow the instructions in the table below to unlock.

<p>1. In Standby State (solid RED LED), enter the default Admin PIN '11223344' and then press the 'UNLOCK' button</p>		<p>GREEN and BLUE LEDs will alternately blink several times and then to a solid BLUE LED changing to a blinking GREEN and finally to a solid GREEN LED</p>
--	--	---

Note: Once the diskAshur DT² has been successfully unlocked, the **GREEN** LED will remain on and in a solid state. It can be locked down immediately by pressing the '**LOCK**' button once or by (**strongly recommended**) clicking the 'Safely Remove Hardware/Eject' icon within your operating system.

PIN Requirement

- PINs must be a minimum length of **7** and maximum **15** digits.
- Cannot contain all sequential numbers (2345678 or 9876543).
- Cannot contain all repeating numbers (1111111).
- The SHIFT key can be used for additional combinations (e.g. SHIFT+1 is a separate value to just 1).

Changing the Admin PIN

To change the Admin PIN to your own unique 7-15 digit PIN, follow the steps below.

1. In Standby State (solid RED LED), press and hold down both the 'UNLOCK' and number '1' buttons		Solid RED LED will change to blinking GREEN and BLUE LEDs
2. Enter the default Admin PIN '11223344' and press the 'UNLOCK' button		GREEN and BLUE LEDs blink rapidly together for a few seconds then to a solid GREEN and finally a solid BLUE LED indicating the diskAshur DT ² is in 'Admin Mode'
3. In Admin mode (solid BLUE LED), press and hold down 'UNLOCK + 2' buttons		Solid BLUE LED will change to blinking GREEN and solid BLUE LEDs
4. Enter your NEW Admin PIN and press 'UNLOCK' button		Blinking GREEN and solid BLUE LEDs will switch to a single GREEN LED blink and then back to blinking GREEN and solid BLUE LEDs
5. Re-enter your NEW Admin PIN and press 'UNLOCK' button		Blinking GREEN and solid BLUE LEDs change to a rapidly blinking BLUE LED and finally to a solid BLUE LED indicating the Admin PIN has been successfully changed
6. To exit Admin Mode press the 'LOCK' button		Solid RED LED indicates the drive is locked and in the standby state

Adding a New User PIN in addition to the Admin PIN

In addition to the Admin PIN, the diskAshur DT² can be configured with an independent User PIN.

To create a new User PIN follow the steps below.

1. In Standby State (solid RED LED), press and hold down both the 'UNLOCK' and number '1' buttons		Solid RED LED will change to blinking GREEN and BLUE LEDs
2. Enter your Admin PIN (default '11223344') and press the 'UNLOCK' button		GREEN and BLUE LEDs blink rapidly together for a few seconds then to a solid GREEN and finally a solid BLUE LED indicating the diskAshur DT ² is in 'Admin Mode'
3. In Admin mode (solid BLUE LED), press and hold down 'UNLOCK + 3' buttons		Solid BLUE LED will change to blinking GREEN and solid BLUE LEDs
4. Enter your NEW User PIN and press 'UNLOCK' button		Blinking GREEN and solid BLUE LEDs will switch to a single GREEN LED blink and then back to blinking GREEN and solid BLUE LEDs
5. Re-enter your NEW User PIN and press 'UNLOCK' button		GREEN LED rapidly blinks for a few seconds then changes to a solid BLUE LED indicating the User PIN has been successfully created
6. To exit Admin Mode press the 'LOCK' button		Solid RED LED indicates the drive is locked and in the standby state

Unlocking with either the Admin or User PIN

Unlock with Admin PIN (PIN +)

1. To unlock the diskAshur DT² as Admin, enter your Admin PIN and then press the 'UNLOCK' button. GREEN and BLUE LEDs will alternately blink several times and finally changing to a solid GREEN LED indicating the drive is unlocked and ready to use as Admin.

Unlock with User PIN (+ PIN +)

2. To unlock the diskAshur DT² as the User, press the 'UNLOCK' button, all LEDs will blink on and off, then enter your User PIN and press the 'UNLOCK' button again. GREEN and BLUE LEDs will alternately blink several times and finally changing to a solid GREEN LED indicating the drive is unlocked and ready to use as the User.

For more features and detailed instructions please refer to the user manual pre-loaded on your new diskAshur DT² and also available on our website.

iStorage provides the following helpful resources:

- iStorage Website (<https://istorage-uk.com>). Check for up-to-date information.
- E-mail us at support@istorage-uk.com
- Call the Technical Support Department at +44 (0) 20 8991 6260
- iStorage's Technical Support Specialists are available from 9:00 a.m to 5:30 p.m GMT, Mon- Fri.